

## IMPORTANT

Your new **F92EKDPS (PS)** undercounter dishwasher must be installed by professional electrician and plumber. Please take note that the electrical is 208/240 V, single phase and requires a 40 Amp breaker. You **MUST** have a drain (floor or wall) within six (6) feet of the machine in order to drain the wash tank regularly.

## INSTRUCTIONS FOR DAILY USE

- 1** | Open the door of the machine and ensure the **OVERFLOW TUBE** is properly set in place (grey tube located in bottom of the machine). Once the overflow tube is in place, press the main switch (Button "**A**"). This will turn power on and begin the flow of water into the wash tank.
- 2** | Open the door and place the dish rack inside the machine. Close the door and choose the cycle of your choice (Button "**B**"). Press the **CYCLE BUTTON** (Button "**C**") and it will start automatically. The "cycle light" will flash during the cycle and stop once ended.
- 3** | At end of day we recommend you **DRAIN** the machine. To do so, open the door and remove the **OVERFLOW TUBE**. Once removed "Press & Hold" the **DRAIN PUMP BUTTON** for around 5 seconds (Button "**F**"). **\*\*Leave door open for the entire length of draining process\*\*** You will see the water level decrease. Once the wash tank is empty, **TURN OFF** the machine (depress button "**A**") and put the **OVERFLOW TUBE** back into its position. Close the door.

For any further questions or concerns, please contact: **Eurodib Toll Free: 1 888 956 6866**

